

RIDDLEDTV.COM

Note: When <u>both</u> Game Switch inputs are LOW for 1.5 seconds the Switcher will advance to the next gameboard

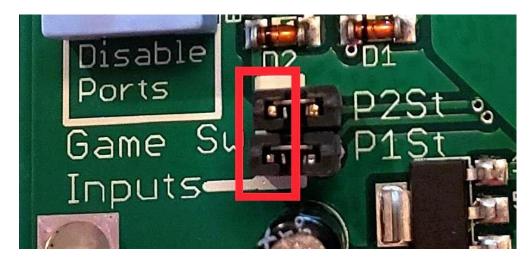


Note: When Player 1 and 2 Start buttons are held for 1.5 seconds, the switcher will advance to the next game.

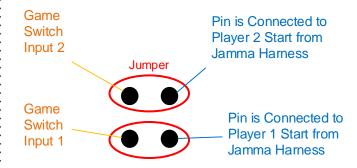


Default State with Jumpers

Game Switch Inputs

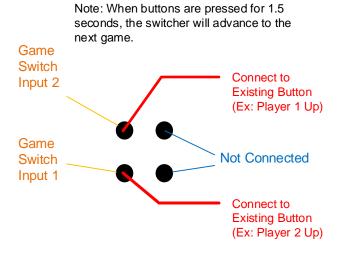

Game Switch Inputs Connected to Existing Control Panel Buttons

Note: When the new dedicated button is pressed for 1.5 seconds, the switcher will advance to the next game.

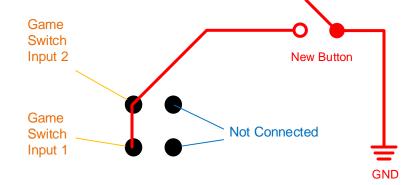

Game Switch Inputs Connected to New Dedicated Button

